10 mm

75 mm

LEXON

LA117
OSLO NEWS+

Design by Manuela Simonelli & Andrea Quaglio

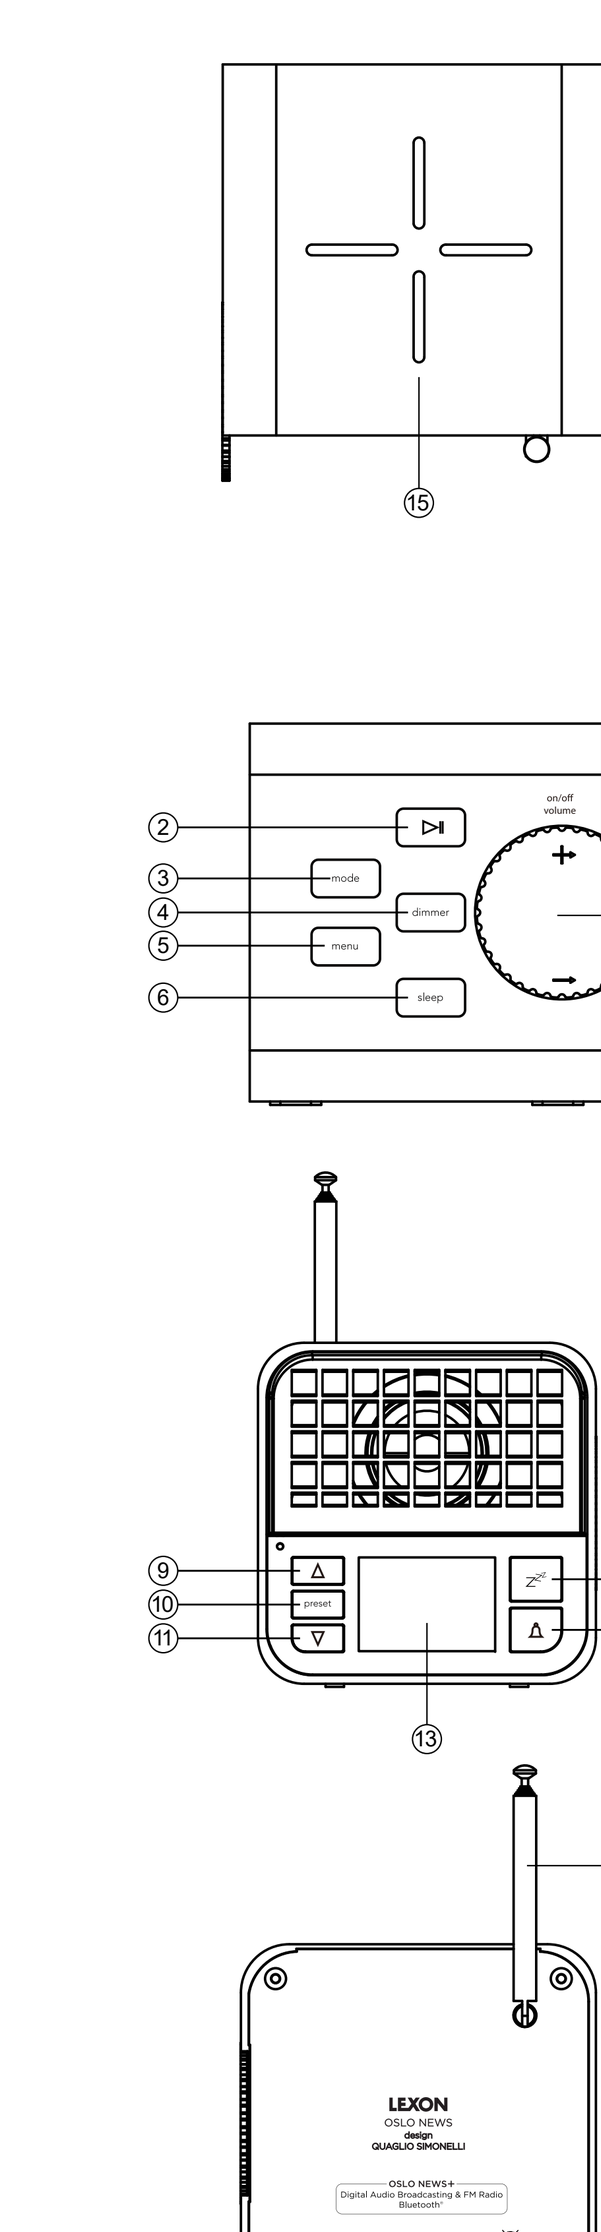

ENGLISH

WHAT'S IN THE BOX
1x Oslo News + DAB/FM Alarm clock radio
1x USB-C cable
1x Power Adaptor with plugs for UK, Europe and USA
1x Quick Start Guide

RODUCT OVERVIEW
Power/Volume
Long press to turn On or Off the unit.
In active mode, short press to enter standby mode.
Turn to adjust the volume.
Play/Pause
In DAB/FM mode, press to mute.
In Bluetooth mode, press to play or pause music.
3 Mode
Press to switch from DAB, FM & Bluetooth modes.
Dimmer
Press to adjust the display brightness.
Menu
• Press and hold to enter in DAB, FM or Bluetooth menu ptions.
• In DAB, FM or BT mode, short press to see additional nformation.
Under the Menu list, press to go back to the previous interface.
Sleep setting
Press to set the sleep timer.
Snooze
Press to snooze.
Alarm setting
Press to set an alarm.
/11 Up/Down
In DAB mode, press to browse the stations list.
In FM mode, press and hold to scan the band for stations.
In Bluetooth mode, press to play previous or next track.
Under the Menu list, press to navigate or adjust settings.
0 Preset
In DAB mode, press to access the Preset recall.
In FM mode, press to access the Preset list.
Under the Menu list, press to select & confirm
2 LCD Display
3 USB-C port
4 Antenna
5 Wireless charging spot

OWER SUPPLY
imply choose the correct plug type for your country from the selection supplied.
Using a different adapter with lower specification, will significantly affect the wireless charging performance, the audio quality and may cause rreversible damages to your device.

IRST SET-UP
1. Before using Oslo News + for the first time, ensure to fully extend the telescopic antenna. The telescopic antenna has a swivel base to llow it to be adjusted to different positions for the clearest sound and DAB/FM signal reception.
2. Using the power adaptor and USB-C cable provided, plug one end of the USB-C cable to the DC power socket found on the rear of your adio. Then connect other end of the cable into the power adaptor. Plug the power adaptor into the mains socket on the wall.
3. Press and hold **<Power** to turn on the device. The LCD display will light up and display before entering in DAB mode.
4. When Oslo News + is switched ON for the first time it will start to scan all usable channels. The initial scan may take a few minutes. After he scan, the DAB will play the first channel in the sequence.
f no stations are found, switch the device off and move it to a location with a stronger signal.

AB MODE
electing a station
1. Press **<Up/Down** to browse the stations list.
. Wait a few seconds before the radio tunes to the displayed station.
avourite DAB stations presets
he Oslo News + allows you to store your 10 preferred DAB stations as presets:
. Select your desired radio station
2. Press and hold **<Preset** until the LCD display "Preset store#" of "Favorite…".
3. Short press **<Up/Down** to select your desired station preset number.
4. Press on the **<Preset** to confirm your selection.
. The display will show "Preset# Stored".
o listen a stored favourite station:
1. Press **<Preset** once.
2. Short press **<Up/Down** to select presets station that you have stored.
. When the display shows your desired preset number
4. Press **<Preset** to confirm.
ote: If you select a preset that hasn't been allocated a station, then "Empty" will be displayed.

hoosing menu options
f the Oslo News + is in DAB mode:
1. Press and hold **<Menu** to enter the menu list.
2. Press **<Up/Down** to select option through the list of menus.
3. Press **<Preset** to enter a menu.
he menu options are: Station list, Local scan, Manual tune, DRC, Prune valid, Equalizer, System setup

M MODE
asic operations
lease make sure that the radio's antenna is extended before operation in FM mode.

To enter FM mode, press **<Mode** until the FM mode screen is displayed.

Press and hold **<Up/Down** to scan the band for stations.
uning will stop automatically when the next station is reached.
Press **<Up/Down** button to tune up or tune down the band in 0.05MHz steps.

hoosing menu options
f the Oslo News + is in FM mode, press and hold <Menu> to enter the menu list.
Press **<Up/Down** button to select option through the list of menus.
Press **<Preset** to enter a menu

he menu options are: Scan setting, Equalizer, Audio search, Channel list, Audio setting, System setup.

LUETOOTH MODE
airing with Bluetooth enabled devices
1. Press **<Mode** to switch to Bluetooth mode.
. To notify you the Oslo News + speaker is in pairing mode, a "On pairing" message will appear on the LCD screen.
. Go in the Bluetooth settings of your phone and ensure Bluetooth is switched on.
. Look for "LEXON Oslo News +" in the Bluetooth device list.
5. Once it appears, tap it to pair. The speaker will emit a confirmation sound as soon as it is paired and a "Connected" message will be isplayed on the screen.

otes & advices
Unpair: To unpair the device, long press **<Play/Pause** .
air with new device: To pair with a new device, unpair the existing device from your phone's Bluetooth settings.

IRELESS CHARGING
harging mode
1. When the Oslo News + is turned on, place the mobile phone with wireless charging function on the top of the speaker, the mobile phone ill start charging automatically.
. Check the charging icon displayed on the phone's screen to check the charging status.
. Remove your phone once charging is complete.

otes & advices
ake sure to place a supported mobile phone on the wireless charging surface.
Under DAB/FM mode, if you don't want to charge your smartphone or feel any interference, long press **<Mode>** to disable the wireless harging function.

LARM
etting an alarm
There are 2 alarm clocks available. To enter the alarm menu, press and hold **<Alarm** .
Once saved, an alarm light will appear on the LCD screen. To view the recorded alarms, press **<Alarm** .
urn off the alarm
ress any button to disable the alarm.
nooze
ress <Snooze> to snooze when the alarm goes off.

LEEP
ou can set the timer to put the radio in standby after certain time.
1. Press **<Sleep** .
2. Press **<Up/Down>** to select the number of minutes to enter sleep mode from the following options: Off/15min/30min/45min/60min/90 in.
3. Press **<Preset** to confirm.

AFETY PRECAUTIONS
ead all the instructions carefully before using the unit and keep them for future reference:
Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
Make sure to plug the USB plug into a Quick Charge 3.0 certified USB power adapter or any external AC adapter 9V/2A.
• Keep your device dry. Never place your device in water to avoid causing internal short-circuit, over-heating, smoking, fire, deformation, r even explosion of the battery.
Do not store your device in very hot or cold areas. It is recommended to use your device at room temperatures.
Do not attempt to service, repair or disassemble.
Do not put metal objects or magnets between the mobile phone and the wireless charging surface.

ECHNICAL SPECIFICATION
odel name: Oslo News+ – LA117
aterial: ABS/Fibers/Metal/Glass
imension: 11 x 11 x10,4cm
nput: AC 110-240V, 50/60Hzq
utput: 9V/2A
requency range: FM 87.5-108MHz / DAB: 174-240MHz
ort type: USB-C
luetooth: 4.2
luetooth range: 10m
ccessories included: Power adapter with plugs & USB-C cable
ireless: Qi-certified
ireless support: Mobile phones with wireless charging function based on Qi technology

FRANÇAIS

DEUTSCH

NEDERLANDS

ITALIANO

ESPAÑOL

РУССКИЙ

RECTO

日本語

中文

한국의

עברית

العربية

POLSKI

TÜRK

ไทย

EUROPEAN UNION
CE DIRECTIVE

LEXON hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the RE Directives 2014/53/EU.
The original EU declaration of conformity may be found at:
https://www.lexon-design.com/assets/certifications-ce-oslonewsplus.pdf

LEXON déclare que cet appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive RE Directives 2014/53/EU.
La déclaration de conformité complète est disponible sur :
https://www.lexon-design.com/assets/certifications-ce-oslonewsplus.pdf

DISPOSAL AND RECYCLING INFORMATION

After the implementation of the European Directive 2012/19/EU in the national legal system, the following applies: electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic device at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment.

LEXON
91, Av. Jean-Baptiste Clément - 92100 Boulogne - FRANCE
All brands or product names are or may be trademarks of their respective owners.
Pictures and specifications are not contractual. Assembled in China.
lexon-design.com

VERSO